



جدول ۵۲: مشخصات ابعادی هواساز چند منطقه‌ای MZ

UNIT SIZE	INSULATION THK. (IN)	A	B	C*	CC	D	G	H	KF	LF	Kc	LC	M	N	R	S	Z
6	1	54	88 1/2	36 1/2	48	32	20	56	19 3/4	32 1/2	17 3/5	25 1/5	48	2	33 1/2	45	7
	34 5/7					36 1/4											
9	1	60 5/8	94 1/4	41 3/4	57 1/2	37 3/4	24	62 5/8	19 3/4	37 3/4	15 3/4	33 6/7	54 5/8	2	33 1/2	45	8
	40 4/9					36 1/4											
13	1	69	103 1/7	52 3/4	63 3/8	41 2/3	28	71	19 3/4	48 3/4	16 1/2	40 1/5	63	2	38 1/2	50	10
	44 1/3					41 1/4											
16	1	69	111 2/3	57	76 1/6	45 3/5	32	71	19 3/4	53	20	45	63	2	42 1/2	54	10
	48 1/3					45 1/4											
19	1	78 3/4	130 7/8	57	82 5/9	59 1/3	44 3/8	80 3/4	23 3/4	53	21	48	72 3/4	2	48 1/2	60	12
	62					51 1/4											
24	1	88 3/5	117 1/7	65 1/3	91 1/5	41 2/3	46	90 3/5	23 3/4	55	23 3/4	57	82 3/5	2	52 1/2	64	13
	44 1/3					55 1/4											
30	1	88 3/5	120 1/2	78 3/4	99 3/4	41 2/3	42 1/4	90 3/5	23 3/4	55	23 3/4	69	83 2/7	2	55 5/6	67 1/3	13
	44 1/3					58 5/9											
36-1	1	102 1/3	129 1/3	78 3/4	98 1/3	48 3/5	45 2/5	104 1/3	23 3/4	55	23 3/4	69	96 1/3	3	53 5/6	67 1/3	15
	52 2/5					57 5/9											
36	1	130 1/2	125 1/4	60	80	51 3/4	40	132 1/2	23 3/4	47 1/4	26	42 1/4	124 1/2	3	46 1/2	60	20
	55 1/2					50 1/4											
40	1	110 1/4	137 2/5	82 2/3	105 1/8	54 3/5	46 1/5	112 1/4	23 3/4	55	23 3/4	69	105	3	55 8/9	69 2/5	17
	58 2/5					59 2/3											
41	1	131 1/2	134 1/4	65 3/4	88	53 3/4	46	133 1/2	23 3/4	47 1/4	28 2/5	42 1/4	125 1/2	3	53 1/2	67	20
	57 1/2					57 1/4											
48	1	118 1/9	150	88 3/5	109 4/5	61 3/5	55 3/4	124	23 3/4	55	23 3/4	69	116	3	61 1/2	75	19
	65 2/5					65 1/4											
51	1	133 1/2	137 1/2	78	108	57	56	135 1/2	23 3/4	47 1/4	23 3/4	47 1/4	127 1/2	3	53 1/2	67	21
	60 3/4					57 1/4											
56	1	118 1/9	170	102 2/5	130 5/7	61 3/5	69 1/2	120 1/9	23 3/4	60	23 3/4	69	112 1/9	3	76 1/2	90	18
	65 2/5					80 1/4											
63	1	142 1/2	148	97 3/4	123	54 1/2	64	144 1/2	23 3/4	63 3/4	23 3/4	63 3/4	136 1/2	3	66 1/2	80	22
	58 1/4					70 1/4											
70	1	126	181	116 1/7	150	66 3/5	73	128	31 1/2	60	31 1/2	69	120	3	87 1/2	95	19
	70 2/5					91 1/4											
73	1	162	154 1/2	105	132	61	66	164	31 1/2	70	26 3/4	63 3/4	156	3	66 1/2	80	25
	64 3/4					70 1/4											

از ارتفاع اصلاح شده (C+Z) در جدول صفحه ۶۸ و ۷۷ استفاده کنید. زمانی که واحد رطوبت زن آبی و ایرواشر انتخاب می‌کنید. توجه: برای پیدا کردن ابعاد " = " صفحه ۶ را ببینید.